

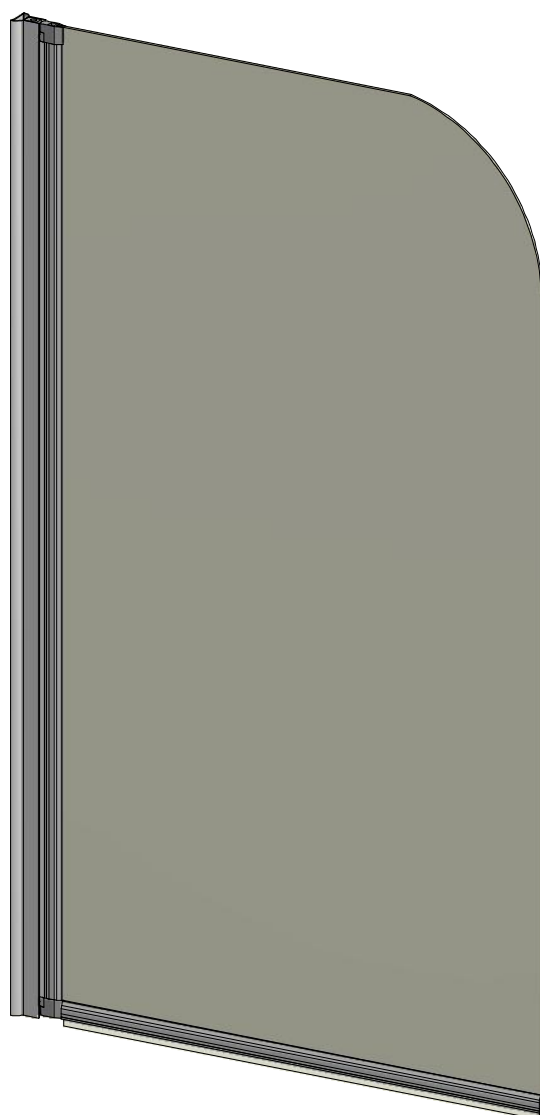
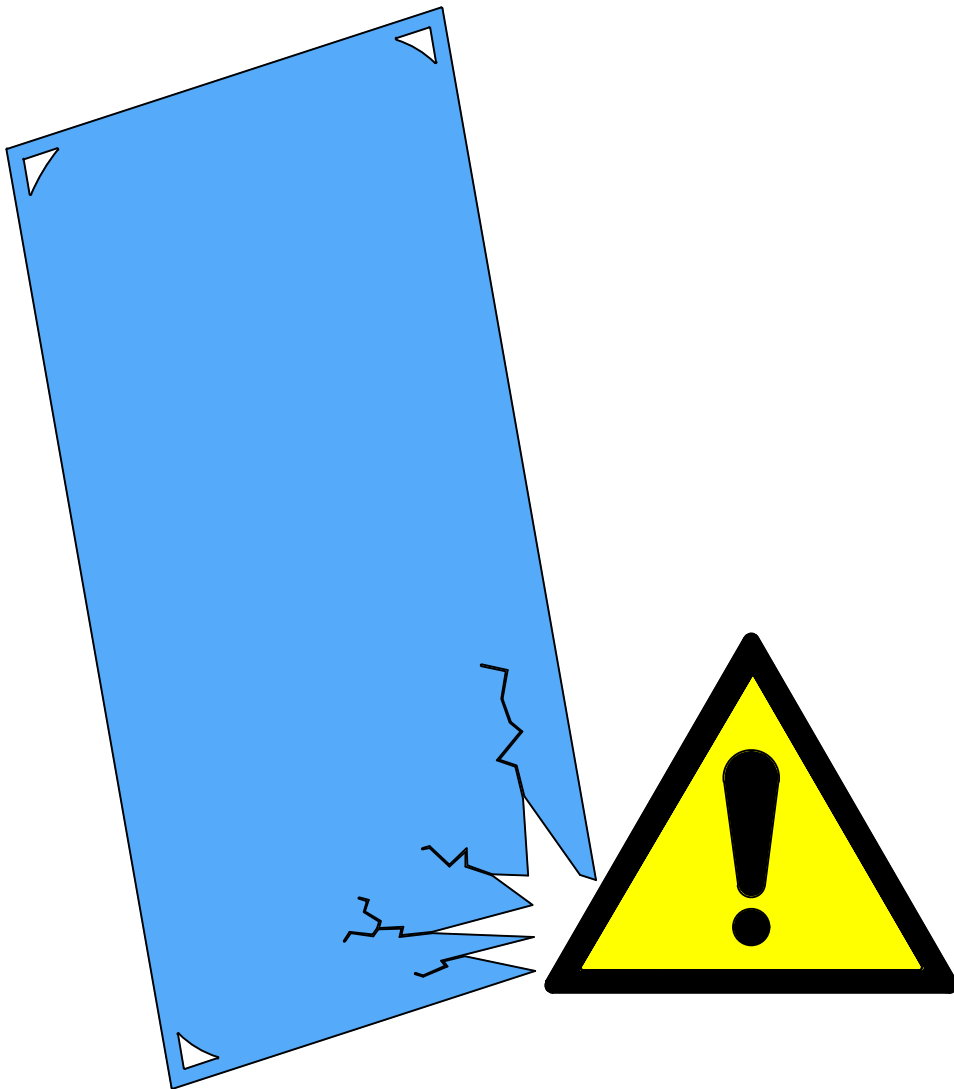
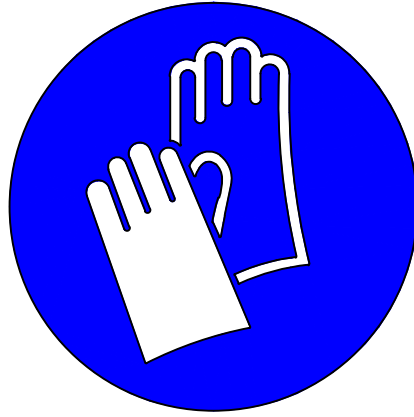


DE Montageanleitung  
FR Notice de montage  
GB Installation instructions  
CZ Montážní návod

# SCREEN PRO

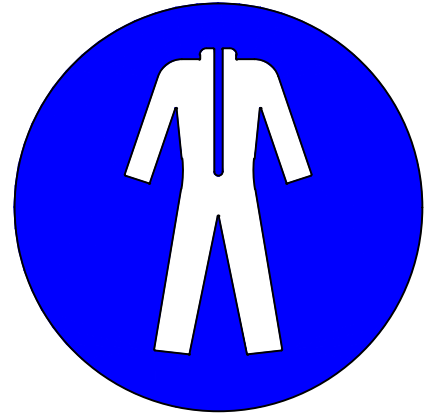

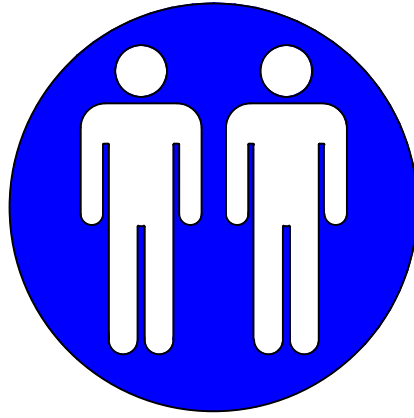


1. 1x  
ND01-3315-2AE




2. 1x  
ND01-3308-2AE



1x  
ND01-4098

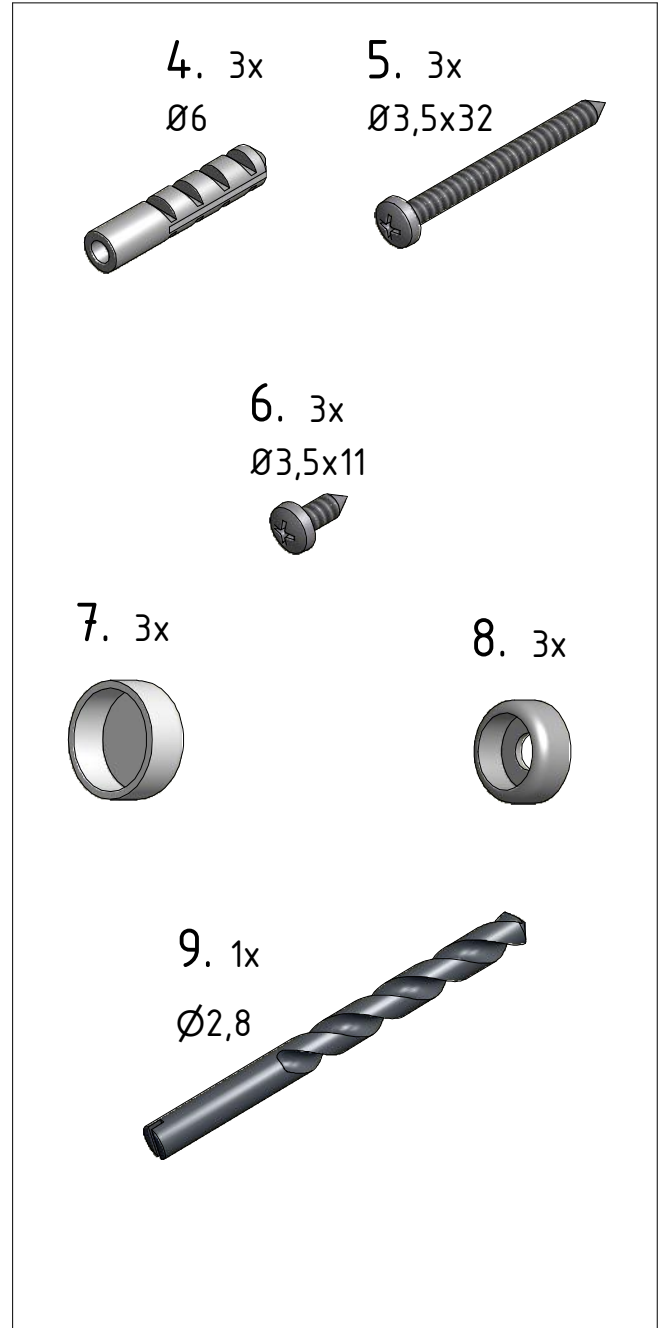


3. 1x  
ND01-3297


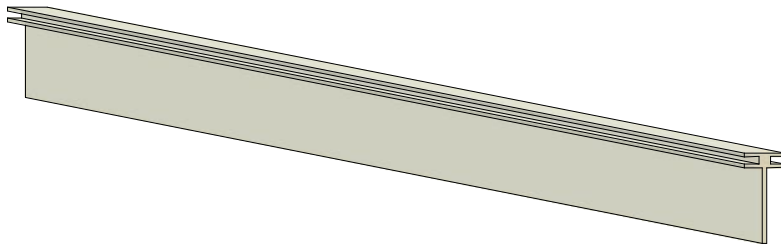


TOOL


A

2.

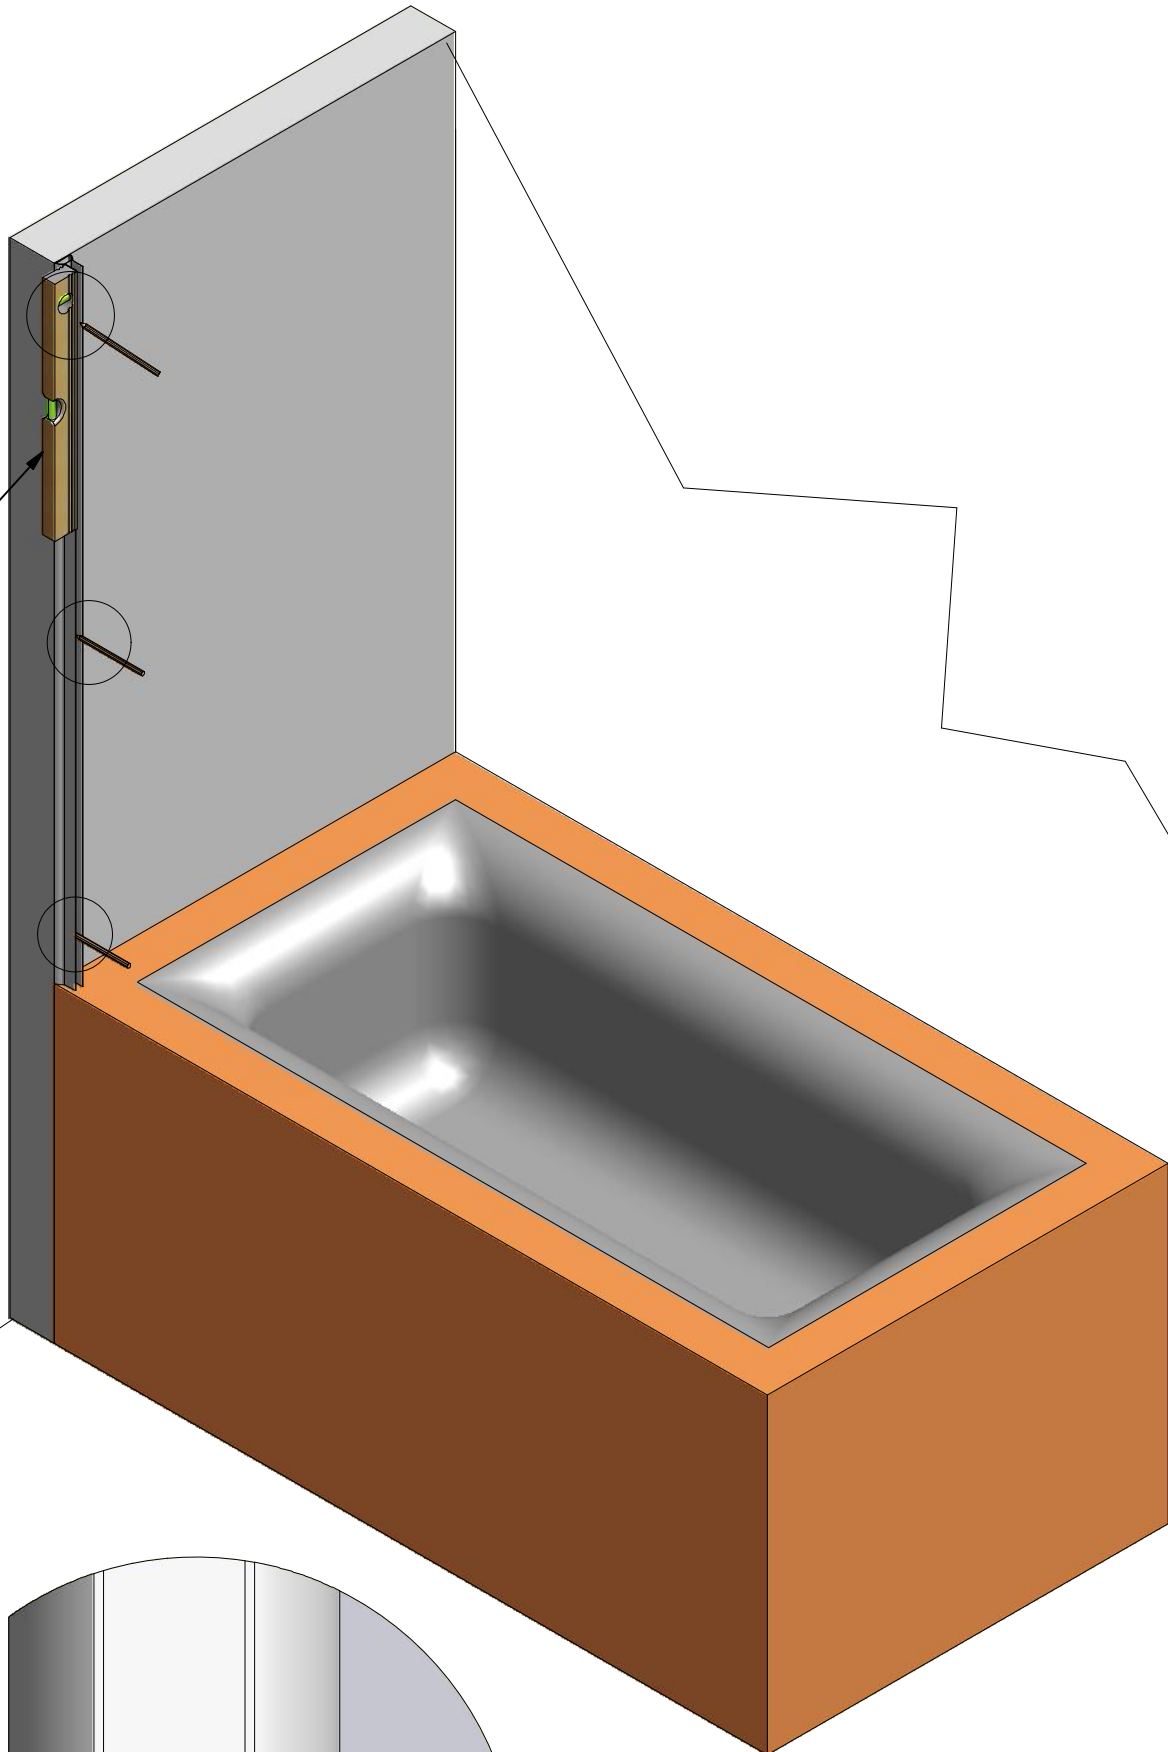

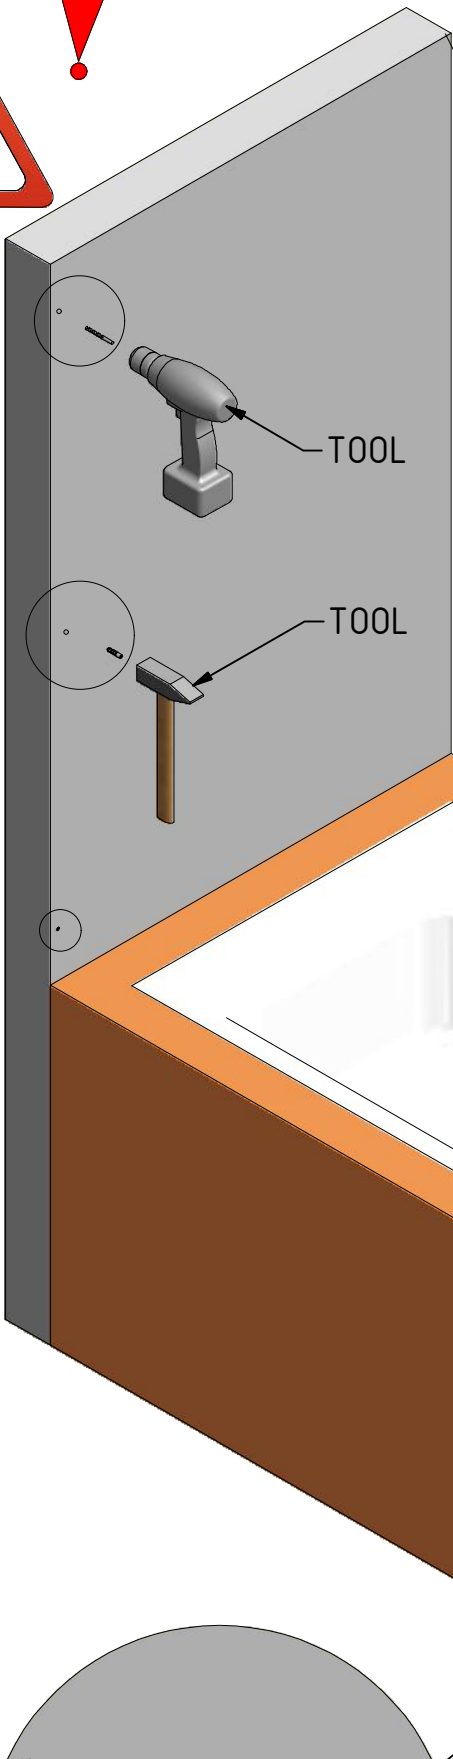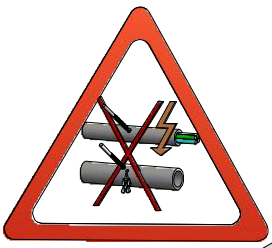


**B** 3x

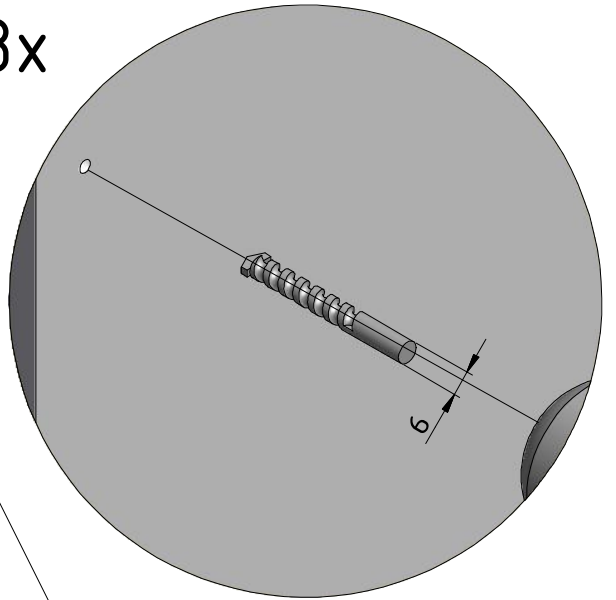


TOOL



TOOL

**C** 3x

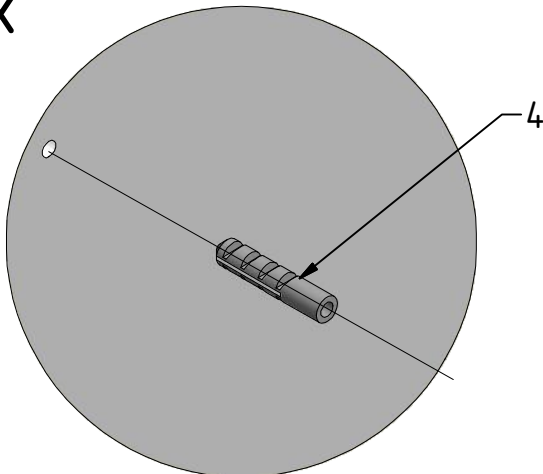



**D** 3x

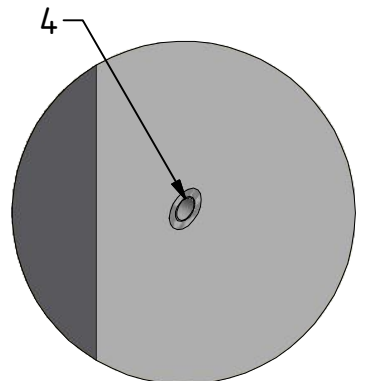

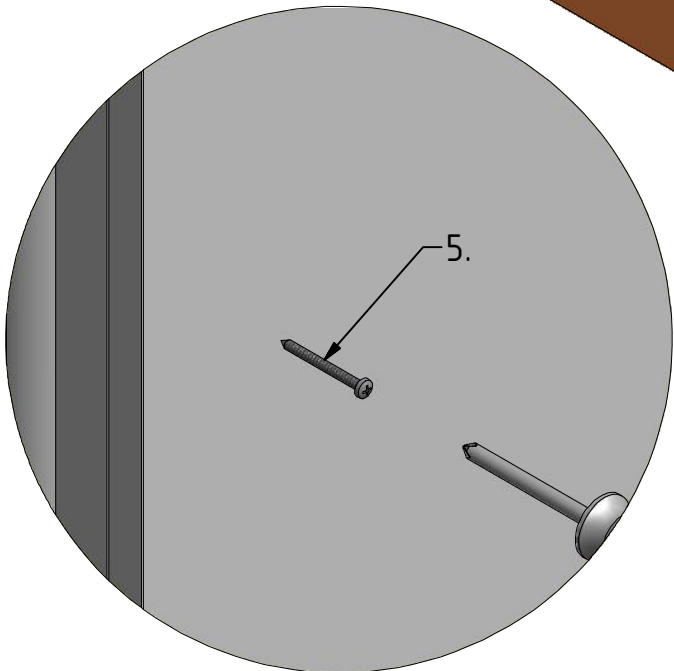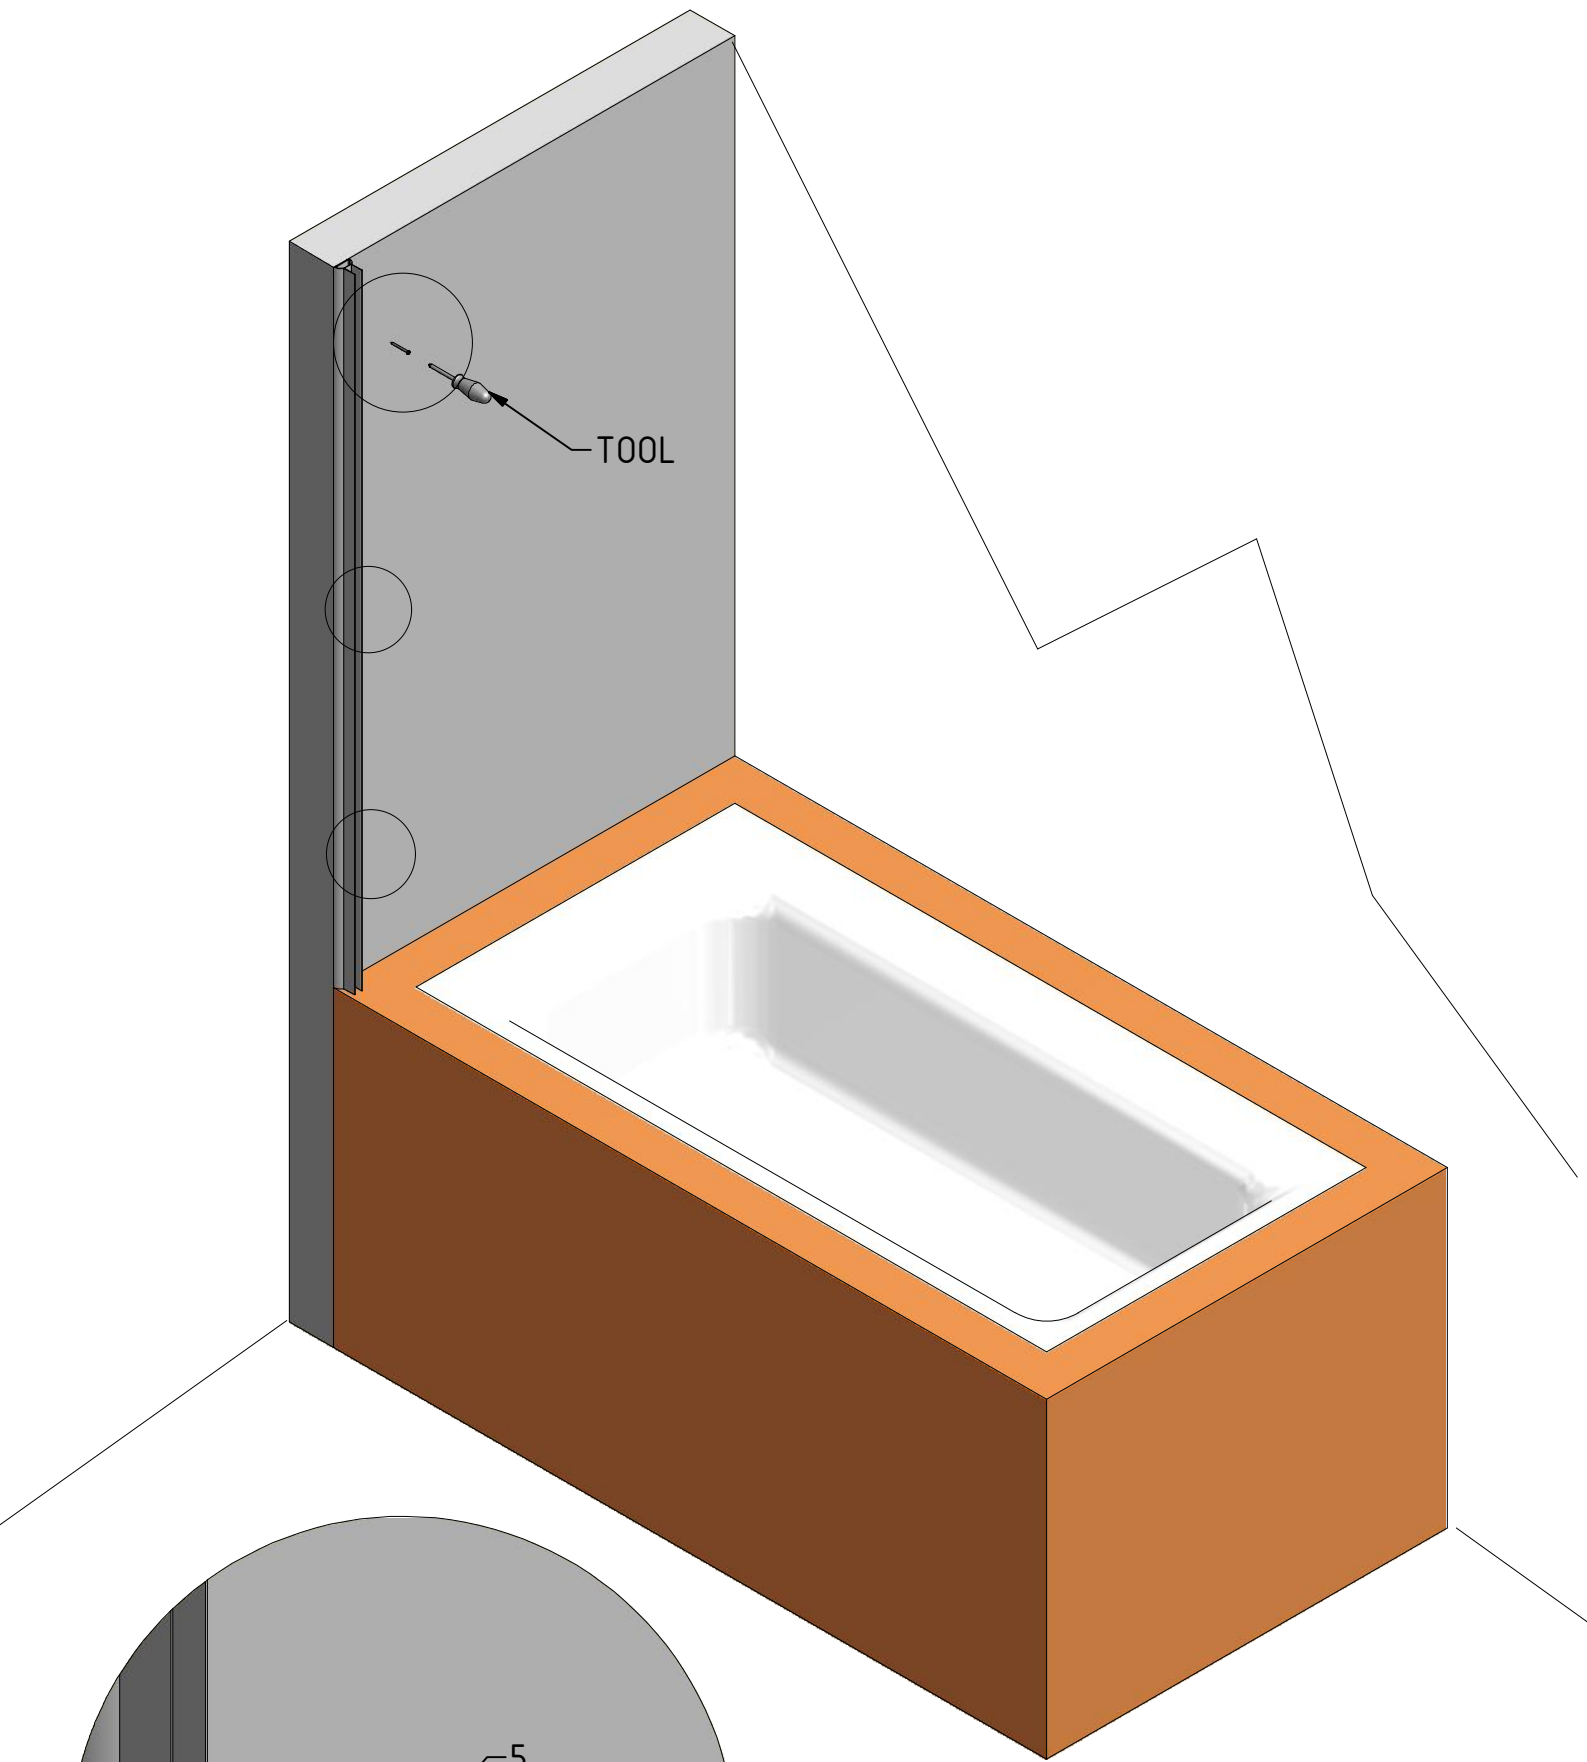

E 3x

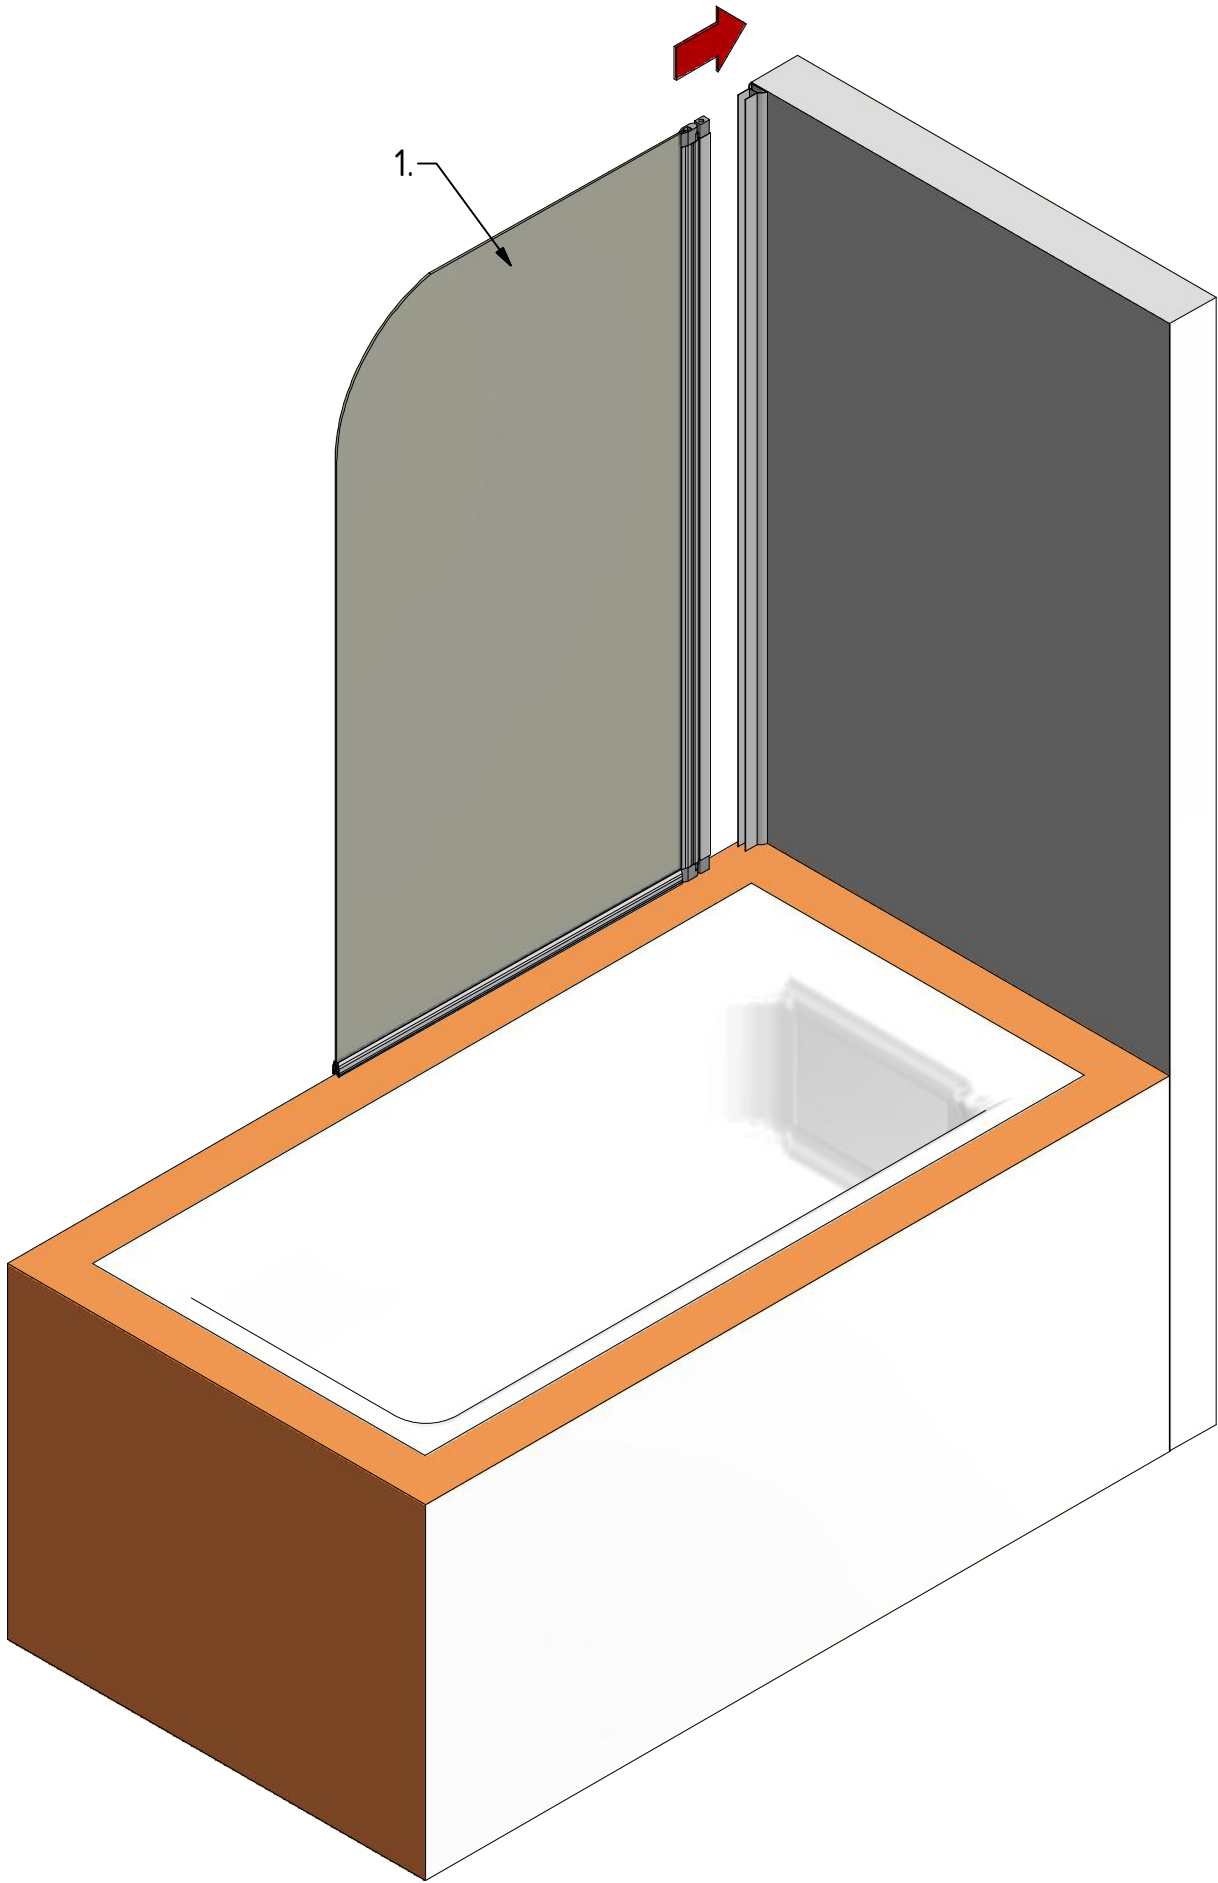

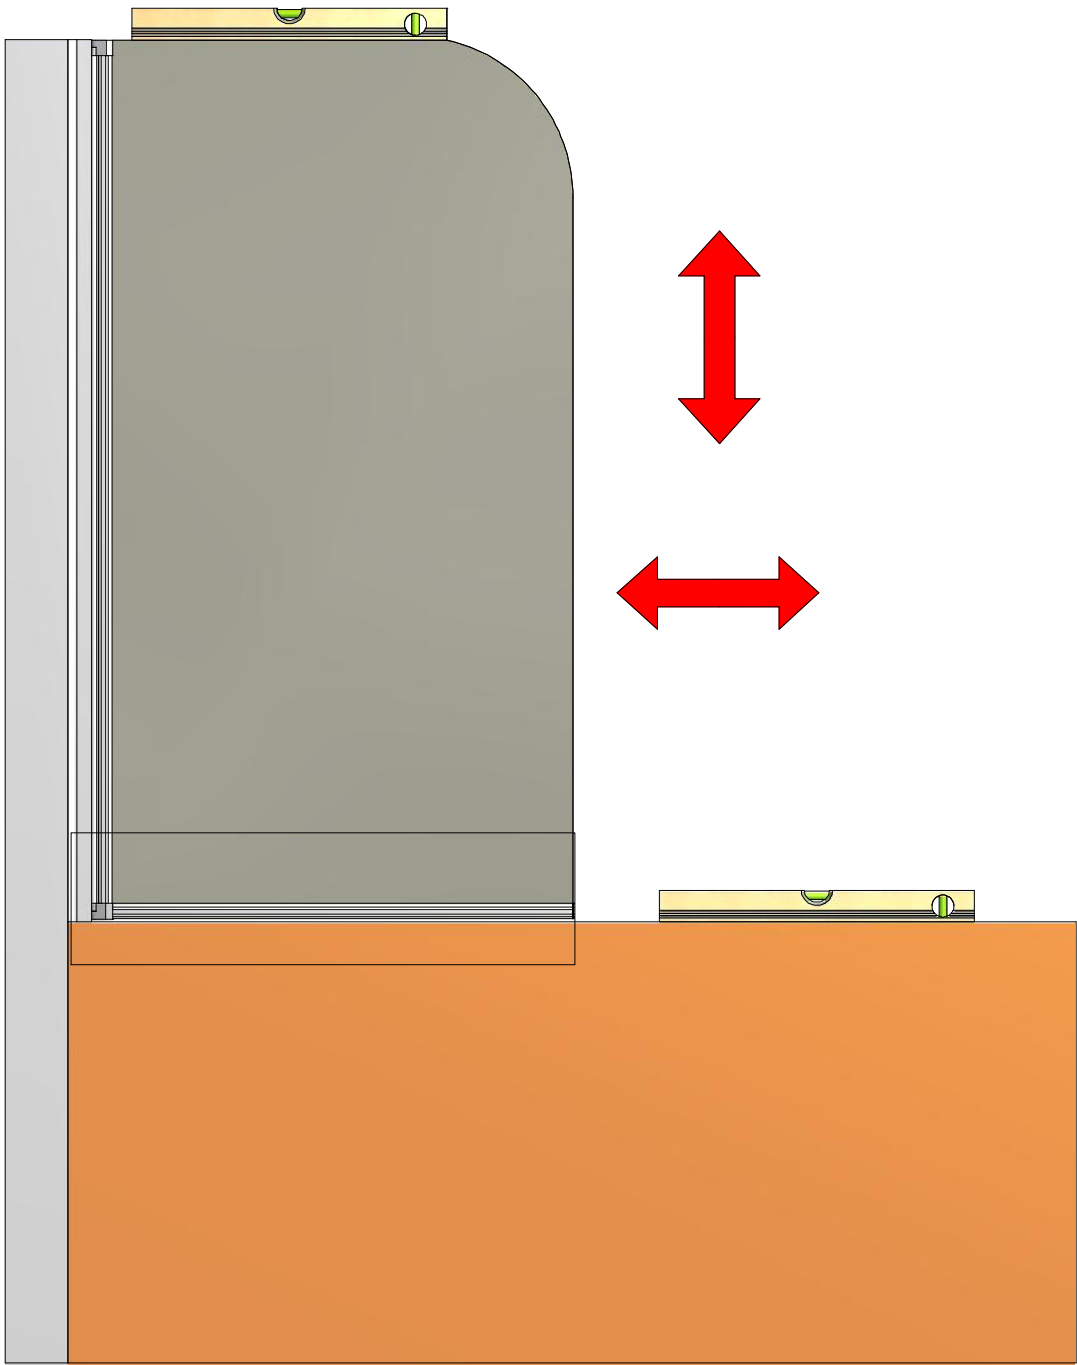




F




$a = \sim 3-5 \text{ mm}$




G 3x

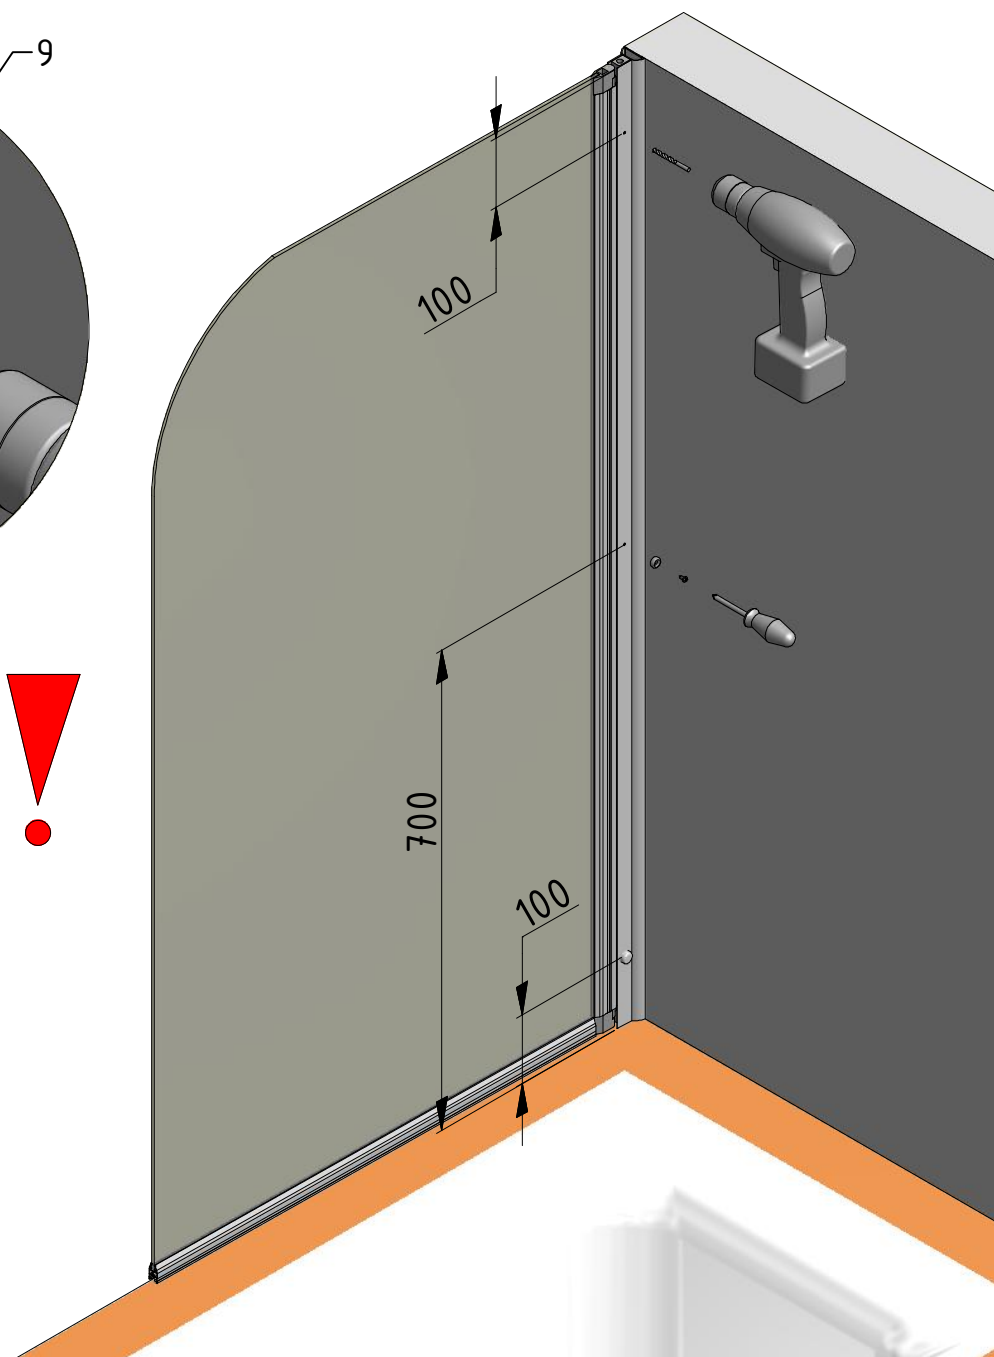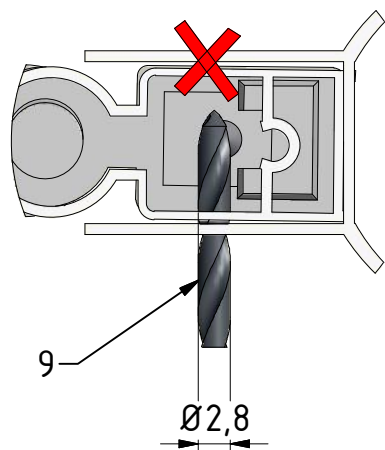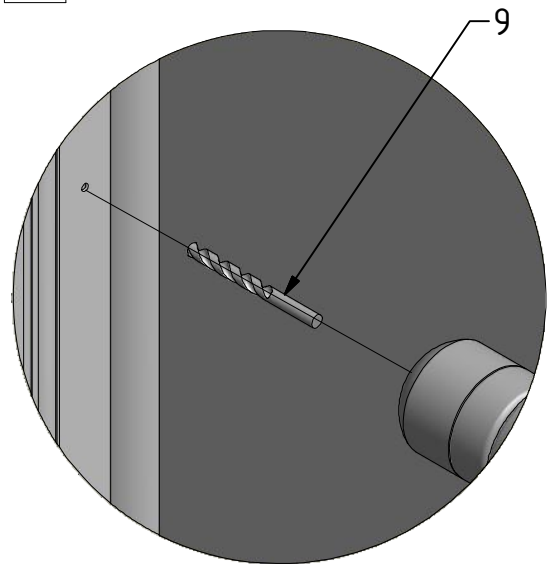


H 3x



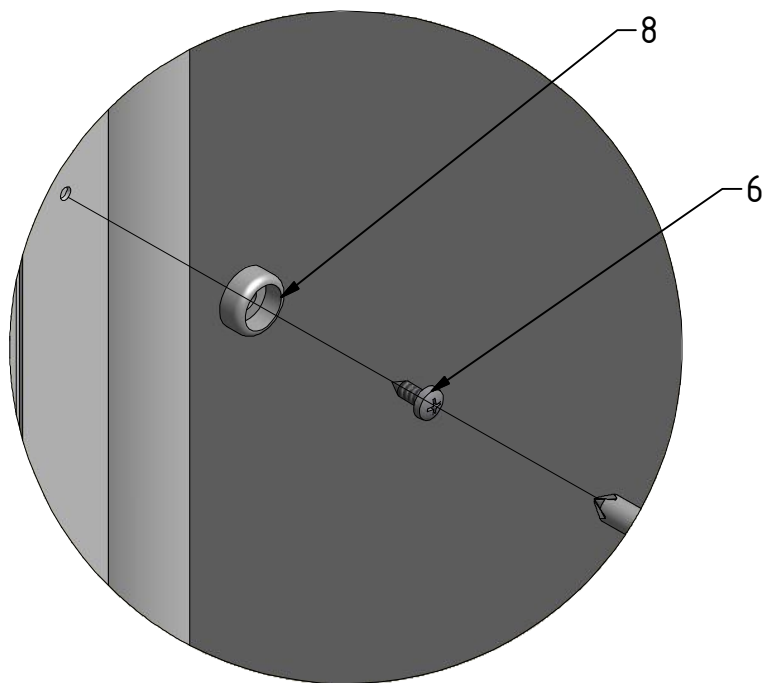



I 3x

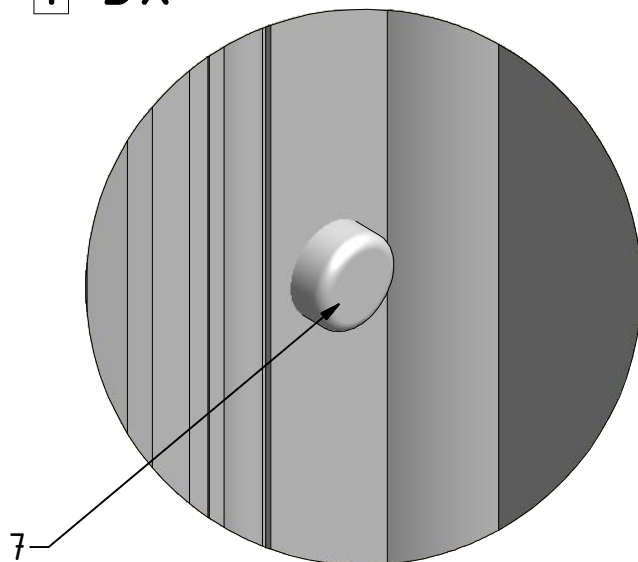

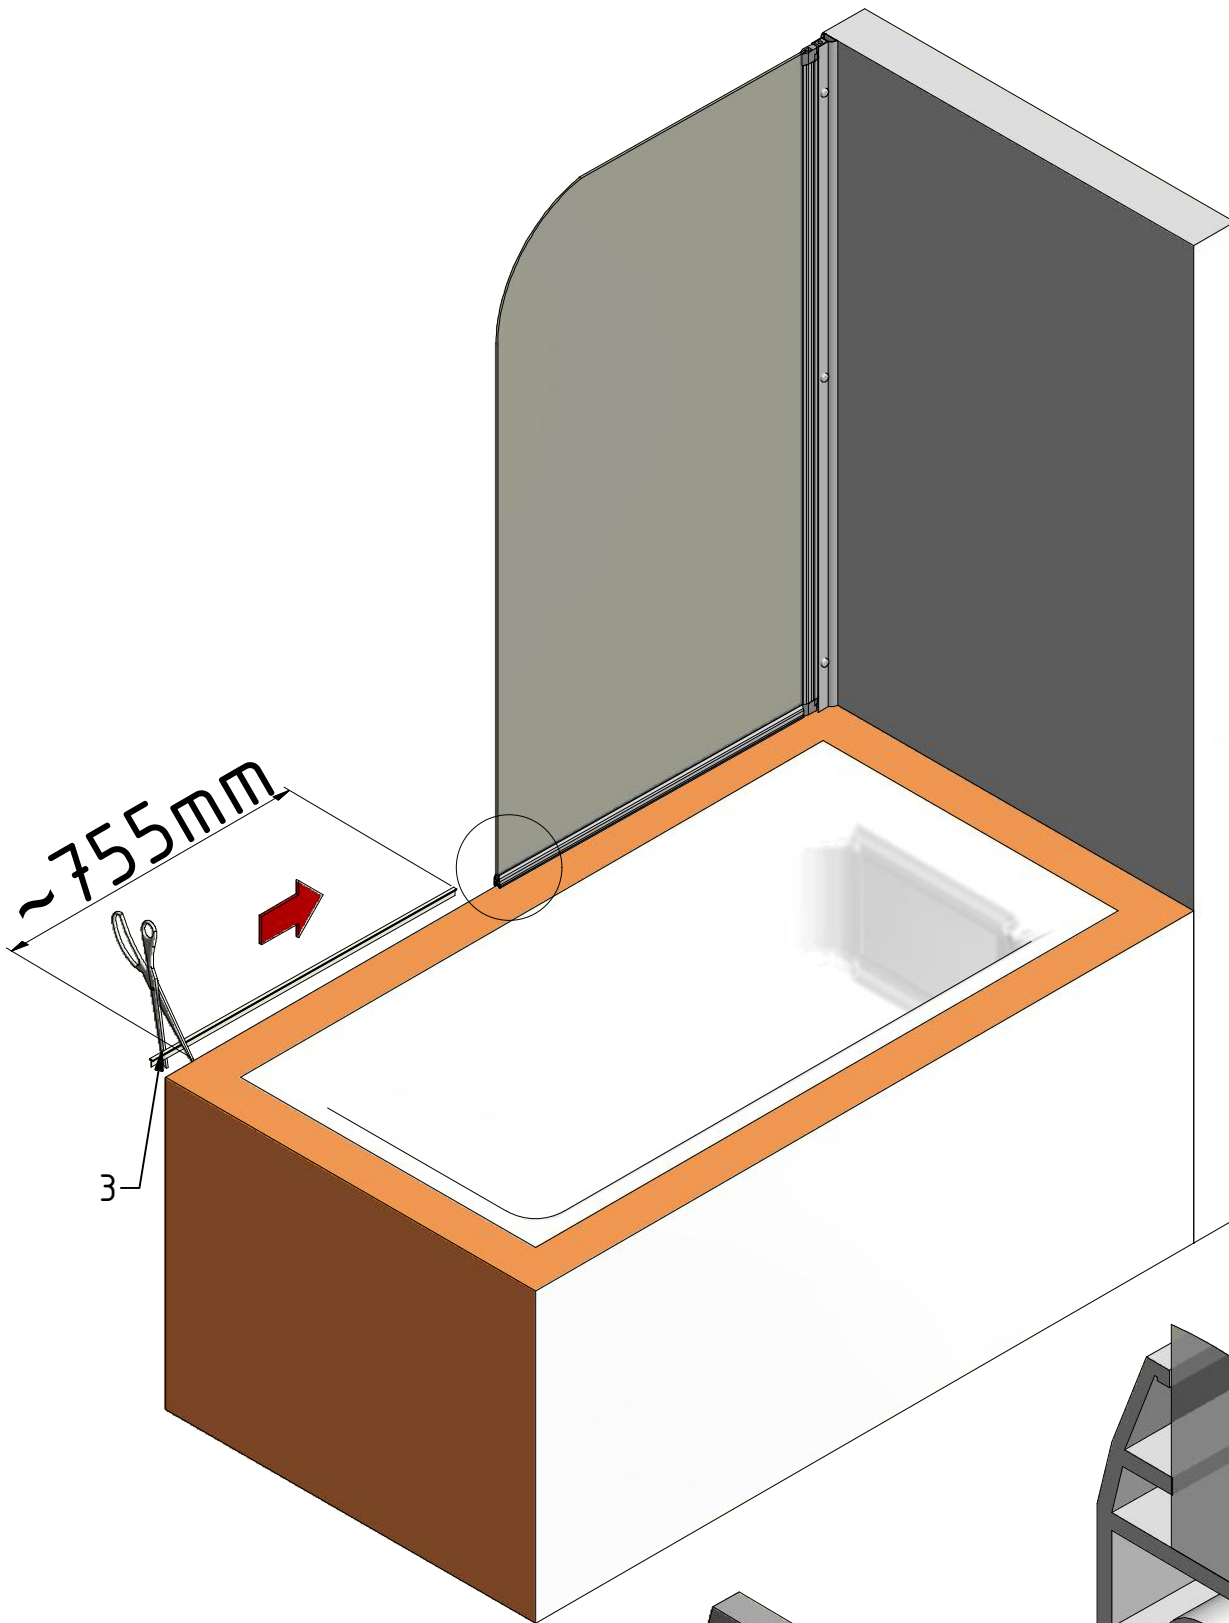


J

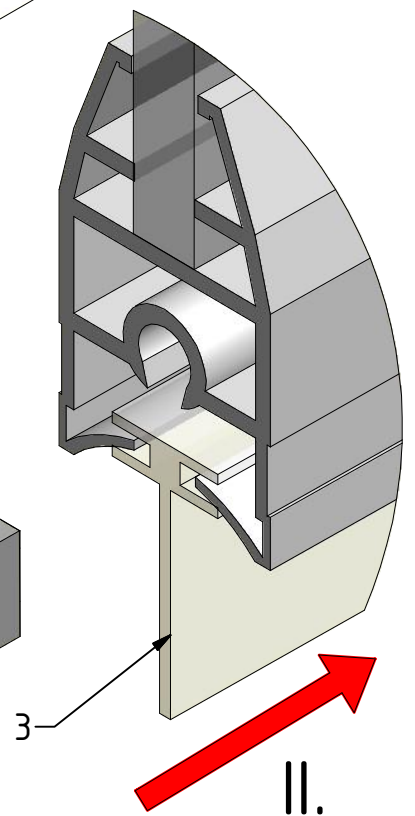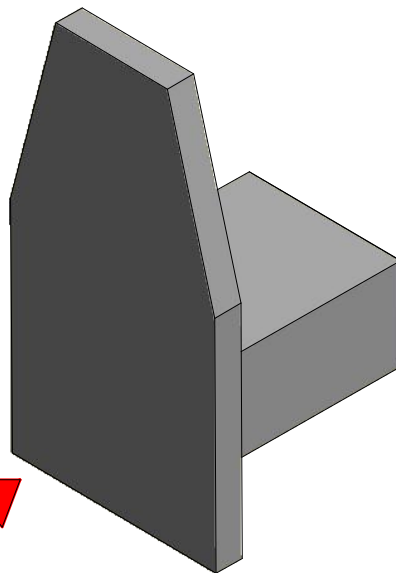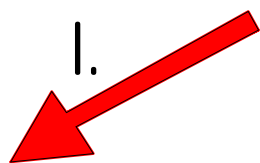

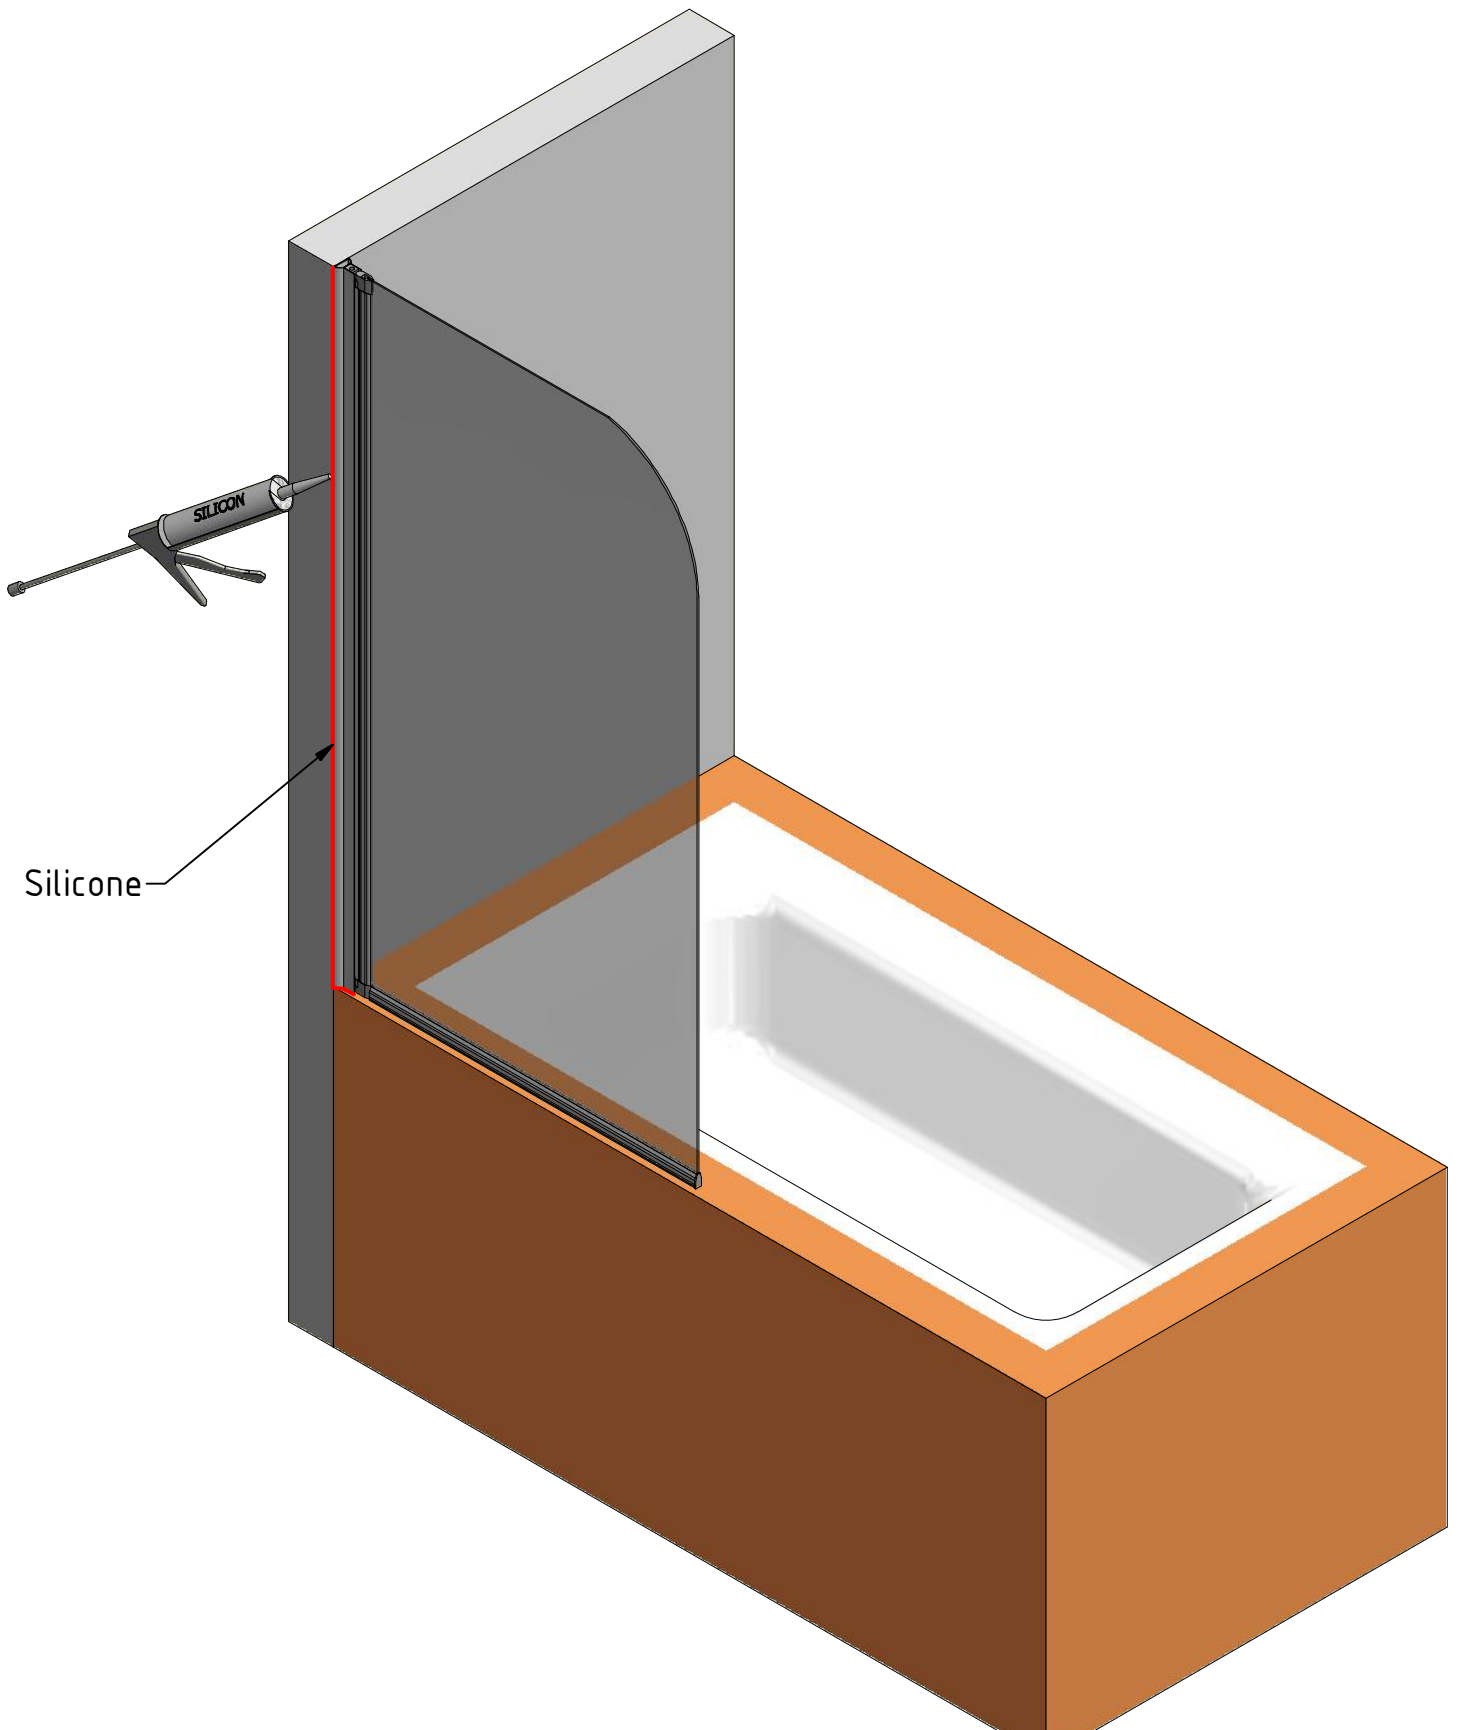

Silicone

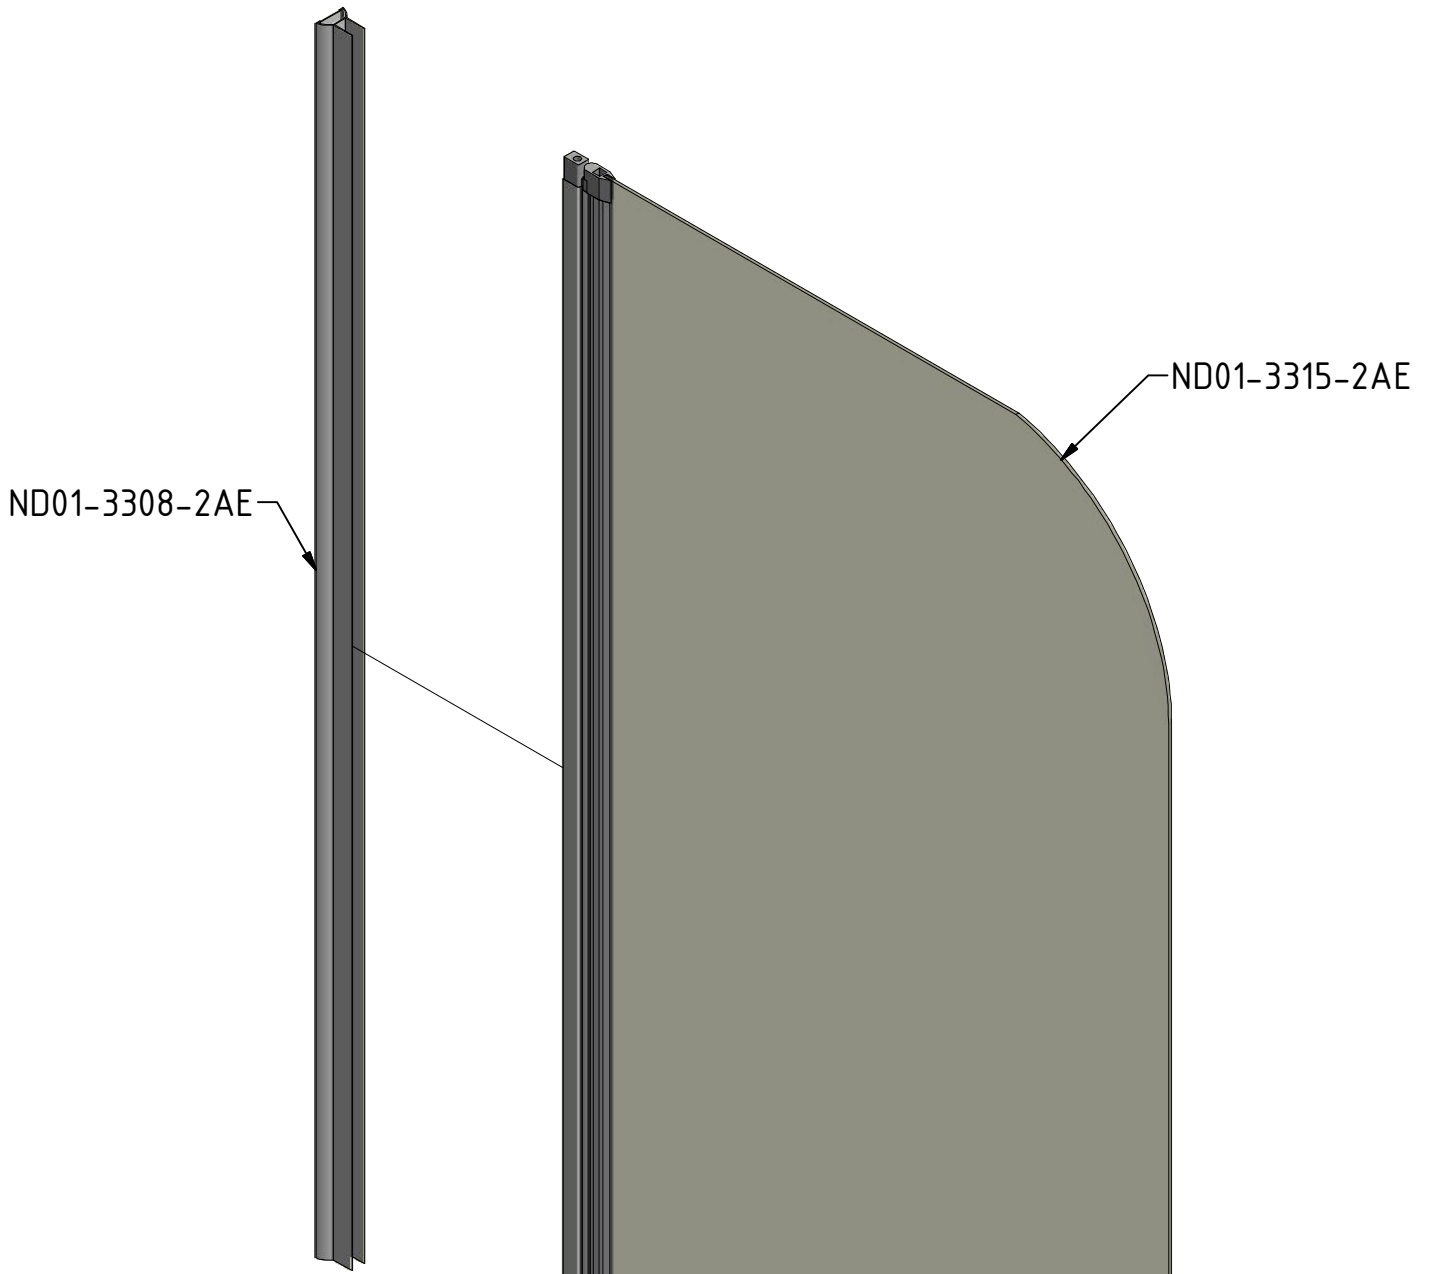

1x  
ND01-4098

